



## USING O ROKR PRO FOR MUSIC

PLAY MUSIC	Press the <b>Play / Pause</b> ►   button.
PAUSE / RESUME PLAYING	Press the <b>Play / Pause</b> ►   button.
STOP	Press and hold <b>Play / Pause</b> button for 1 second.
SKIP TO NEXT SONG	Press the <b>Fast Forward / Next Song</b> ◀◀ button.
FAST FORWARD WITHIN SONG	Press and hold the <b>Fast Forward / Next Song</b> ◀◀ button.
PLAY PREVIOUS SONG	Press the <b>Fast Backward / Previous Song</b> ▶▶ button.
FAST BACKWARD WITHIN SONG	Press and hold the <b>Fast Backward / Previous Song</b> ▶▶ button.

## INDICATOR LIGHT

DURING PAIRING	The light is solid red. It flashes green ten times when pairing is successful.
DURING CHARGING	Solid green = fully charged Solid amber = 99% to 50% charged Solid red = 49% to 0% charged
WHILE WIRELESSLY CONNECTED TO A DEVICE	The light flashes every 3 seconds: Green indicates 100% to 67% charge remaining. Amber indicates 66% to 34% charge remaining. Red indicates 33% to 0% charge remaining.
WHILE NOT CONNECTED TO A DEVICE	The light flashes red twice every 4 seconds.
WHILE POWERING UP	The light flashes red > amber > green > green.
WHILE POWERING DOWN	The light flashes green > amber > red > red.

## BASIC O ROKR PRO FUNCTIONS

TURN ON AND EASY PAIRING MODE	Press and hold the <b>Call</b> ☎ button for 3 seconds.
ENTER PAIRING MODE	Press and hold the <b>Call</b> ☎ button for about 7 seconds, until the indicator light is solid red.
ADJUST VOLUME	Press the <b>Volume Up</b> ► button repeatedly to increase the volume. Press the <b>Volume Down</b> ◀ button repeatedly to decrease the volume.
TURN O ROKR PRO OFF	Press and hold the <b>Call</b> ☎ button for 3 seconds.

## USING O ROKR PRO FOR CALLS

In addition to the features below, more features may be available, depending on what Bluetooth profile your mobile phone supports. See the O ROKR Pro User's Guide for more information.

ANSWER A CALL	Press the <b>Call</b> ☎ button briefly.
MUTE THE MICROPHONE	Press and hold the <b>Volume Down</b> ◀ button for 1 second, until a medium pitch tone is heard. Repeat to release from mute.
END A CALL	Press the <b>Call</b> ☎ button briefly.

## AUDIBLE INDICATORS

DUAL HIGH/LOW TONE EVERY 60 SECONDS	Low battery.
NO AUDIBLE TONES; DETERIORATING AUDIO QUALITY	Out of range. (Move O ROKR Pro closer to your phone or Bluetooth enabled audio device.)
SINGLE HIGH TONE DURING VOLUME ADJUSTMENT	Maximum or minimum volume level has been reached. Phone mode only.
RING TONE	Incoming call.
SINGLE HIGH TONE	Pairing is confirmed.
SINGLE LOW TONE	Initiate voice activation. (Speak the name of the person you want to dial.)
DUAL HIGH / LOW TONE	Voice tag not recognized. (The name of the person you want to dial was not recognized.)
FAST HIGH / LOW TONE EVERY FIVE SECONDS	No network/service. (Your phone is currently unable to communicate with your phone service.)
FOUR TONES, LOW TO HIGH	O ROKR Pro has been powered on.
FOUR TONES, HIGH TO LOW	O ROKR Pro has been powered on.