



**WARNING**

**CRANKCASE 3-HAND MANUAL**

## CRANKCASE™ THREE-HAND


Engineered for a life with momentum, this Swiss Made timepiece lets you gauge the moments that refuse to stand still. Impact forged stainless steel puts an edge of distinction on the art of Oakley, and precision is honed with 5 jewel movement. Carbon reinforced impact bumpers are matched with a pure sapphire crystal and case shielding that can withstand water pressure equivalent to a depth of 330 feet (100 meters). This sport-inspired design combines rugged durability with sophisticated ease for a life in motion.

## SETTING THE TIME

Your Oakley timepiece features a screw-down crown for added protection against moisture. After it is unscrewed from the case, the crown can be pulled out to two click positions for setting the date and time. To set the date and time the *first time* (or to reset the date and time after the battery is changed), do the following:

### TO SET THE TIME

1. Pull the crown out to the first click position (a).
2. Turn the crown until yesterday's date appears.
3. Pull the crown out to the second click position (b).
4. Turn the hands forward until today's date appears, then continue forward until the current time is reached. If the current time is in the afternoon or evening, move the hour hand all the way around the dial to pass 12 o'clock noon.
5. Push the crown back in. Gently turn the crown clockwise until it screws back into the case.

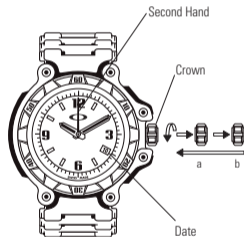

To set the exact second, wait until the second-counting hand reaches "60" before you pull out the crown to the second click position (b). Set the time then wait until the exact second is reached before pushing the crown back in.

## TO ADJUST THE TIME AND DATE FOR SUBSEQUENT SETTINGS, USE THESE SHORT PROCEDURES

### TO SET THE TIME


1. Pull the crown out to the second click position (b).
2. Turn the crown until you reach the correct time.
3. Push the crown back in. Gently turn the crown clockwise until it screws back into the case.

### TO SET THE DATE

1. Pull the crown out to the first click position (a).
2. Turn the crown until you reach the correct date.

If the current time is between 9:30 PM and 3:00 AM, set the date to the following day. (This is necessary to ensure the date display will normally change at midnight instead of 12 noon.)

3. Push the crown back in. Gently turn the crown clockwise until it screws back into the case.

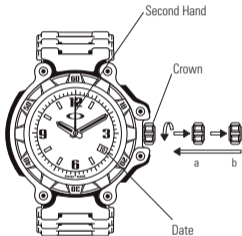

## USING THE ROTATING BEZEL

The top bezel can be rotated to measure time intervals. Rotate the bezel counterclockwise to align the “60” mark (which is also the zero mark) with the minute hand on the main dial face. After a time interval, use the numbers on the bezel to read the elapsed time in minutes. Note that the bezel rotates in only one direction.

### POWER SAVING MODE

When the timepiece is not in use, the battery life can be prolonged by pulling the crown out to the second click position (b). This will stop the hands and reduce power consumption.

### LOW BATTERY INDICATOR

When the battery is running low, the small second hand will move in four-second intervals. If this occurs, the watch will continue to display time accurately but the battery should be replaced as soon as possible.

## BATTERY REPLACEMENT

---

The miniature battery that powers the timepiece is designed to last approximately 40 months in the three-hand small edition and 72 months in the three-hand standard edition. However, because the battery is inserted at the factory for extensive performance checks, its actual life, once in your possession, may be less.

Battery replacement may be performed only by an Authorized Oakley Service Center. Any attempt to open the watch case by persons other than Authorized Oakley Service Professionals will void the product warranty.

Within the United States, call Oakley global headquarters at 1-800-403-7449 to find an Authorized Oakley Timepiece Service Professional near you. Customers outside the United States should contact their local Authorized Oakley Timepiece Dealer or visit the Oakley website at [www.oakley.com](http://www.oakley.com) for the number of the nearest Oakley distributor.

## BAND ADJUSTMENT

---

### METAL BRACELET MODEL

If links need to be added or removed from the band, the adjustment should be done by an Authorized Oakley Timepiece Dealer. Do not attempt to shorten the band by removing links yourself, as this may result in damage to the bracelet.

### LEATHER STRAP MODEL

The natural leather of the strap may stretch slightly during break-in, so adjust the fit accordingly.

### LEATHER CARE

Even the highest quality leather has a finite lifespan that may be reduced by excess wear and tear, exposure to the natural acids in perspiration, and exposure to the environment. To maximize the longevity of natural leather components in the leather strap model, avoid direct contact with solvents and other chemicals; avoid prolonged exposure to sunlight; and avoid soaking the components in water.

### CLEANING

Failure to keep the case and band clean may result in a skin rash. Use a soft, clean cloth to wipe off any moisture that adheres to the case or band.

**COMPOSITION**

CASE BODY .....	Stainless steel
CASE STRUCTURE .....	Carbon reinforced impact bumpers
MANUFACTURING .....	Impact forged, high-precision CNC machined
CRYSTAL .....	Sapphire with anti-reflective coating
CROWN .....	Double seal for water resistance

**STAINLESS STEEL BRACELET MODEL**

BRACELET COMPOSITION .....	Impact forged stainless steel
KINETICS .....	Carbon fiber reinforced self-lubricating thrust washers
CLOSURE .....	Stainless steel deployment clasp w/ dual pusher release

**LEATHER STRAP MODEL**

STRAP COMPOSITION .....	Genuine leather
ATTACHMENT.....	Stainless steel attachment link
CLOSURE .....	Impact forged stainless steel buckle

**UNOBTAINIUM® RUBBER STRAP MODEL**

STRAP COMPOSITION .....	Oakley Unobtainium® rubber
ATTACHMENT.....	Stainless steel attachment link
CLOSURE .....	Stainless steel deployment clasp

**SPECIFICATIONS**

MOVEMENT .....	Swiss Made, 5-jewel
TYPE OF OSCILLATOR .....	Quartz tuning fork
FREQUENCY OF OSCILLATOR .....	32,768 cycles per sec.
ACCURACY .....	-12 /+18 sec. per mo.
THERMAL OPERATING MIN .....	0°C (32°F)
THERMAL OPERATING MAX. ....	50°C (122°F)
WATER RESISTANCE .....	10 bar; equivalent to depth of 100m / 330ft
BATTERY (3-HAND SMALL EDITION).....	Silver oxide: No. 362, SR 721 SW
BATTERY (3-HAND STANDARD EDITION) .....	Silver oxide: No. 371, SR 920 SW
BATTERY ENDURANCE (3-HAND SMALL EDITION) .....	Approx. 40 months
BATTERY ENDURANCE (3-HAND STANDARD EDITION).....	Approx. 72 months

## SAFEGUARDING

---

### WATER EXPOSURE

Prior to exposing the timepiece to water, ensure the crown is pushed fully down against the case then turn the crown clockwise to tighten the water seal. Rated at 10-bar hydrophobic, the timepiece may be worn during bathing, swimming and shallow diving. It is not designed for scuba or saturation diving. Do not pull out the crown or use the buttons if the timepiece is wet. If used in seawater, rinse the timepiece with fresh water and dry completely. For the leather strap model, avoid soaking the strap, as this may damage the natural leather.

### TEMPERATURE

For precision timekeeping, normal operating temperature is 0°C to 50°C (32°F to 122°F).

### MAGNETISM

Strong magnetic fields can have an adverse affect on the timepiece. Keep it away from magnetic objects.

### CHEMICALS

The timepiece may become discolored or damaged if exposed to cosmetic spray, detergents, adhesives, solvents, or paints.

### SHOCK WAVE

Although the timepiece resists shock damage, impact against a hard surface may cause damage to the movement or crystal.

### PERIODIC MAINTENANCE

To ensure that the case, crown, crystal seal, and gasket remain resistant to water exposure, it is recommended that the timepiece be inspected once every 2 to 3 years by an Authorized Oakley Service Center.

## OAKLEY WARRANTY POLICY

---

All authentic Oakley timekeeping instruments are warranted against manufacturer's defects for two full years from the date of purchase. Coverage is valid only with proof of purchase from an Authorized Oakley Timepiece Dealer.

### IMPORTANT

This limited warranty does not cover the crystal, strap/band/bracelet, or attachments. The deterioration of leather components is not covered, nor are scratches to the case caused by use, nor is moisture damage if the timepiece is a non-hydrophobic model, nor is damage caused by natural disaster such as fire, flood, or earthquake. We reserve the right to relinquish all responsibility under this guarantee for repair of damage when misuse or abuse is evident, including defects related to tampering or servicing done by agents other than Authorized Oakley Service Facilities. This warranty does not affect specific legal rights of the consumer.

To qualify for service under the above guarantee, valid proof of purchase — which clearly shows the purchase date and the name of the Authorized Oakley Timepiece Dealer — must be presented if a repair claim is made during the warranty period.

## OAKLEY WARRANTY POLICY

---

### REGISTRATION

The cutting-edge technology within each Oakley timepiece serves as validation of its authenticity. By registering your timepiece via mail or online at [www.oakley.com](http://www.oakley.com), you provide further credentials by allowing us to document your purchase.

### HOW TO MAKE A WARRANTY CLAIM

Within the United States, telephone our global headquarters at 1 (800) 403-7449 with your purchase information. Customers outside the United States should contact their local Authorized Oakley Timepiece Dealer or visit the Oakley website at [www.oakley.com](http://www.oakley.com) for the number of the nearest Oakley distributor.

Swiss Movement  
Swiss Made

## HOW TO MAKE A WARRANTY CLAIM

---

Oakley Global Headquarters, USA: 1 (800) 403-7449

Oakley Africa: +27 41 501 0200

Oakley Brasil Ltda.: 0800-770-7822 ou 0xx11-4197-9999 (Grande São Paulo e celular)

Oakley Canada: 1-877-625-5396

Oakley Europe: Belgium: 0800 10 464 • Denmark: 800 10 631 • España: 900 993 385  
• Finland: 0 800 11 33 80 • France: 0 800 037 619 • Nederland: 0800 022 9086  
• Island: 800 83 82 • Italia: 800 343 467 • Luxemburg: 800 22 957  
• Norge: 800 11 268 • Portugal: 800 833 011 • Sverige: 020 795 467

Oakley GMBH: Germany, Austria and Poland: +49-89-99650-4181

Oakley Japan: 0120 009 146

Oakley México: 52) 55 59503643

Oakley South Pacific (Australia): 1 800 637 001

Oakley South Pacific (New Zealand): 0800 696 255

Oakley UK: 01462 475400 Eire customers: 00 353 4439557